# • T-0-IS Operating Guide

# Multi-Function Belly Pack Transmitter for hazardous locations



## **Care and Handling**

Failure to follow care and handling instructions will void the warranty and could result in unsafe equipment operation.

Clean transmitter gently with a damp cloth or dry, compressed air. Do not immerse transmitter in water, or spray with hose. Do not store outside.

Do not drop transmitter or otherwise subject transmitter to physical shock.

Do not expose transmitter to extreme temperatures.

Do not open transmitter enclosure. Transmitter contains no user serviceable parts.

## **IMPORTANT!**

Read this manual completely before operating system.

Keep this manual available for future reference.

Make sure the area is safe for operating equipment before turning power on or starting equipment.

If you encounter any problem or malfunction, discontinue use immediately, and contact your equipment dealer for service or replacement parts.

## **CAUTION**

Improper operation of these controls could cause damage to equipment. Do not allow anyone to operate this equipment before completely reading all manuals.

## **NOTICE**

Miratron, Inc. controls are not intended for life or safety applications. Miratron, Inc. shall not accept responsibility for installation, application, or safety of machine or systems which utilize Miratron, Inc. controls.



# **OPERATION**

#### **Controls**

Transmitters are built-to-suit, and may be equipped with joysticks, potentiometers, paddles, pushbuttons, switches, and other customer-specificed controls. Take time to familiarize the operation and arrangement of the controls before operating equipment.

#### **Batteries**

Operates from 3 x "D" cell batteries. Only Duracell MN1300 type may be used to maintain certification. Do not change batteries in hazardous location. Batteries are accessible by a cover on the bottom of the belly pack. To ensure maximum battery life, be sure to turn the transmitter OFF when not in use. Remove batteries prior to shipping or storing transmitter.

#### Transmitter/Receiver Matching

Transmitters and receivers are shipped from the factory as matched pairs. If a new transmitter is to be used, it must be trained to operate the receiver.

Training procedure:

Transmitters with tether cables:

- 1. Remove transmitter to non-hazardous location.
- 2. Connect transmitter to receiver using tether cable provided.
- 3. Operate transmitter to verify tether is connected.
- 4. Disconnect tether, and resume normal operation.

503-352-0654

SPECIFICATIONS		
Transmitter	Frequency	902-928MHz, Unlicensed ISM band standard models
		2.4-2.4835GHz, Unlicensed ISM band international option
	Range (line of sight)	Standard range = 500 feet
		Extended range = 1500 feet
	RF Power Output	Standard range $=$ 60mW
		Extended range = 100-250mW
	Battery Type	3 "D" size alkaline, Duracell MN1300 ONLY
	Battery Life (fully charged)	Standard range = Standby, 80 hrs; Transmit, 35 hrs
		Extended range = Standby, 20 hrs; Transmit, 8 hrs
		International = Standby, 15 hrs; Transmit, 6 hrs
	Controls	User specified toggles, joysticks, potentiometers, or paddles
	Led Indicator	Flashing = normal; Double blink = battery low
Enclosure	Belly Pack	High-impact urethane, Polane urethane paint finish
		Plated or powder coated steel guard plates
		Stainless steel, rubber insulated hand rails
	Dimensions	11-1/4″L x 5-1/2″W x 6-1/2″D
	Weight	Under 10 lbs. with batteries for average configuration
Environmental	Sealing	IP65

FM Certificate number: 3035340

